## **Hose Reel Ratchet Arm Replacement – Part # HRPART1**



## Tools Needed:

- 17mm Wrench or Socket
- 5/8" Wrench or Adjustable Wrench
- Needle Nose Pliers

Step 1



Remove 17mm nut from outside of Reel housing, may have to secure the 5/8" Pin inside with wrench.

Step 2



Reach behind arm and pull the Ratchet Arm assembly where you can access it to disassemble.

## **Hose Reel Ratchet Arm Replacement – Part # HRPART1**

Step 3

Remove Steel washer, Black Spacer, and Black Pin from the Arm.

Step 4



With needle nose pliers, remove arm from spring leaving spring attached to the reel base..

## **Hose Reel Ratchet Arm Replacement – Part # HRPART1**

Step 5





Replace Arm with new Arm (and spring if needed) and reassemble, in the order of pin, arm, spacer, washer as shown.



Feed Assembly back into the reel and reattach nut and tighten.